


WIDDER TOOLS

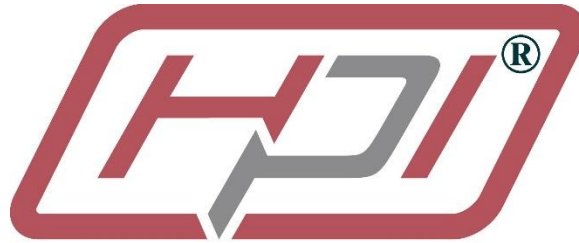

Industrial Manufacturing Solutions

18413 QUICK CHANGE RETROFIT KIT



PRODUCT INFORMATION AND OPERATING INSTRUCTIONS

Description: The **18413** Quick Change Retrofit Kit is a simple, heavy-duty blade clamping system that allows for fast and easy blade changes.

IMPORTANT: READ MANUAL CAREFULLY BEFORE OPERATING THIS TOOL. FOLLOW ALL SAFETY PRECAUTIONS LISTED AND ALL OSHA REGULATIONS PERTAINING TO THIS TOOL.

OPERATING INSTRUCTIONS:

1. Remove clamp screw, washer and Blade Clamp
Inspect Blade Clamp for damage and replace if necessary




2. Remove Shoe Screw, washers and Shoe




3. Install the new quick change device




- a. NOTE: The mounting flange is offset to one side
- b. Mount the deep side against the connecting rod
- c. Use the Blade Clamp, screw and washer to mount the quick change device (the hole on Blade Clamp will line up with hole on the mounting flange)

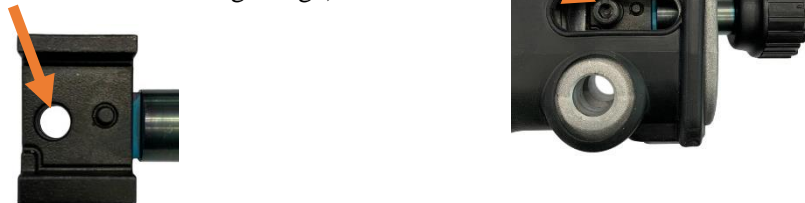

4. Install the shoe extension using the new screw, washer and lock washer while pushing the back face against the front face of saw

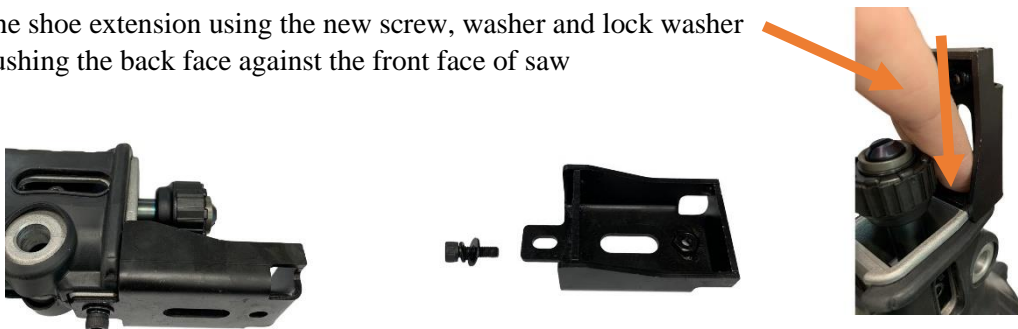

5. Install existing shoe with screw and washers, making sure shoe remains square to tool when tightening screw

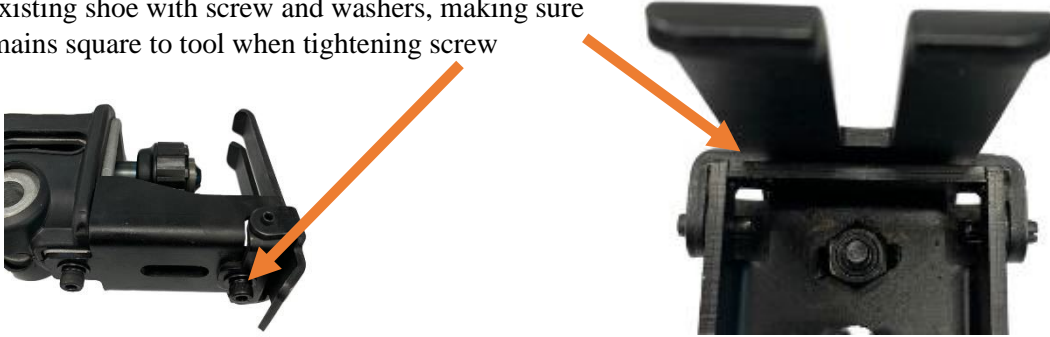

6. To install a blade, twist the locking mechanism, insert blade into slot then release locking mechanism

